


## **Switch Replacement Procedure**







Picture 1 Picture 2 Picture 3

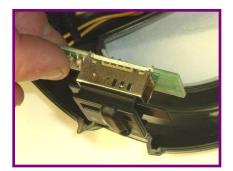



Picture 4. Picture 5

- 1. Place Hose handle on flat surface
- 2. Remove 8 No. screws from Hose Handle (see pic 1)
- 3. Lift off top section of Hose Handle (see pic. 2)
- 4. Carefully remove switch arrangement (see pic. 3)
- 5. Insert new switch arrangement (see pic. 4)
- 6. Re-fit top section of Hose Handle
- 7. Re-secure Hose Handle with 8 No. screws (see pic. 5)
- 8. Insert Hose into wall and test

Should you require additional assistance, please do not hesitate to contact us by calling on **028 7963 2424** or email info@beamcentralsystems.com